UNIVERSAL LENS SUPPORT (19mm/15mm Studio)

Included:

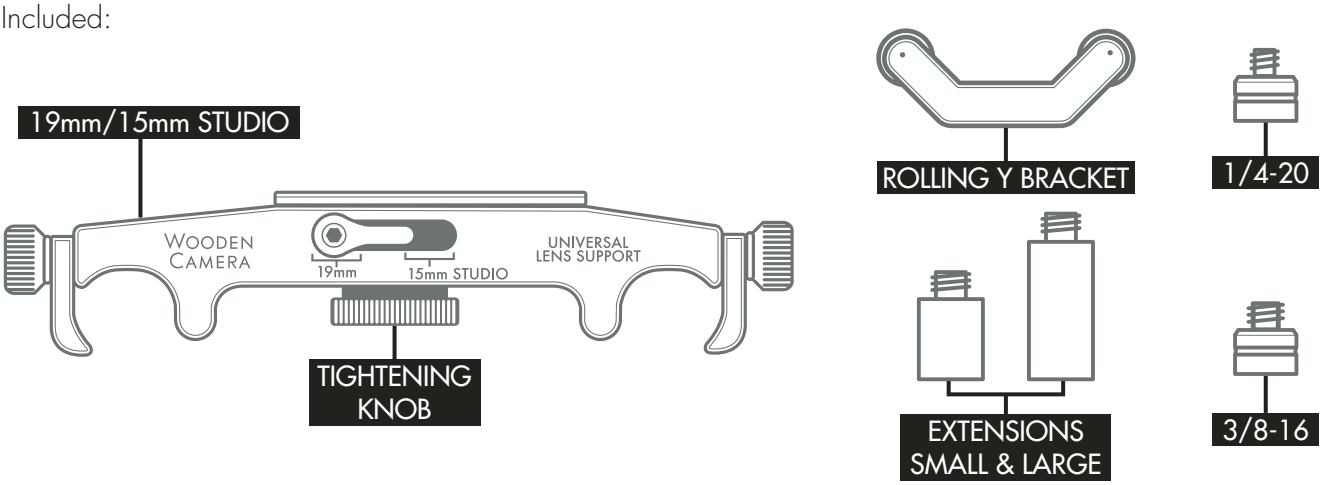

INSTALLATION

NOTE: LENS SUPPORT comes with factory installed **3/8-16 SCREW**. To remove and install additional adapters follow the steps below.

1. Select **LENS SUPPORT**, loosen thumscrew, locate and loosen **TIGHTENING KNOB** to remove **3/8-16.**
2. To switch from**19mm** to **15mm STUDIO**, loosen and slide **THUMBSCREW** to desired position and re-tighten, adjust the **ROD CLAMP** size by turning the **THUMBWHEELS**.
3. Choose desired adapter type. For example: select and tighten **Y BRACKET** to **LARGE EXTENSION** and install as shown below.
4. Select **LENS SUPPORT**, insert **Y BRACKET**, insert **TIGHTENING KNOB**, adjust left or right position and up or down to proper lens height, tighten **THUMBSCREW** until vertical & horizontal position is secure.

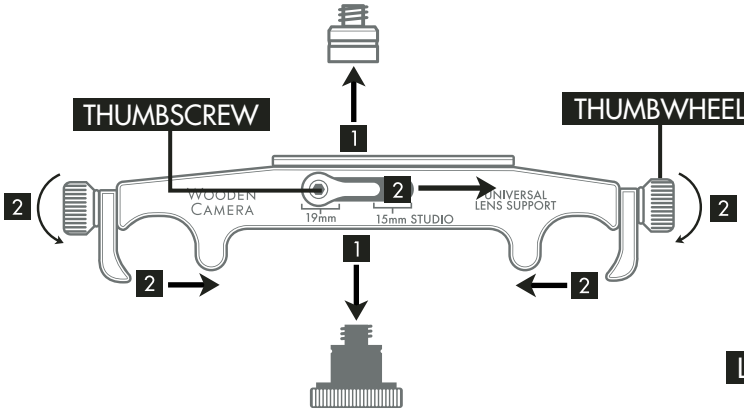

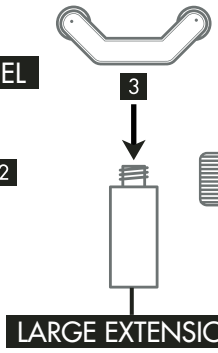

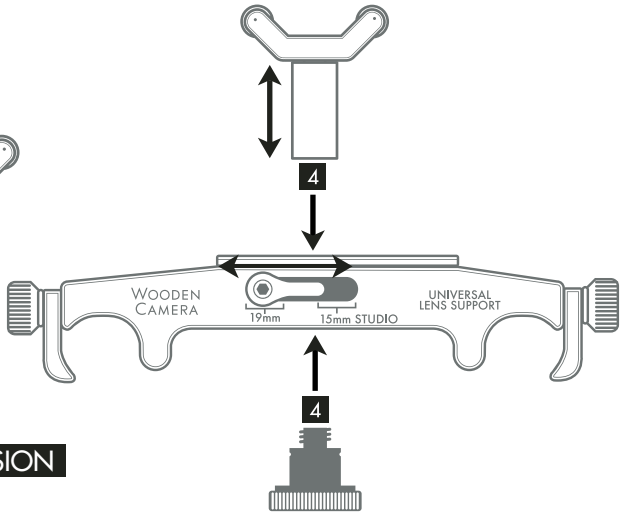

4. Place **LENS SUPPORT** on **RODS** and tighten using **THUMBWHEELS**.
5. Unlock **THUMBSCREW**, center position under **LENS FOOT** and re-tighten **THUMBSCREW**.

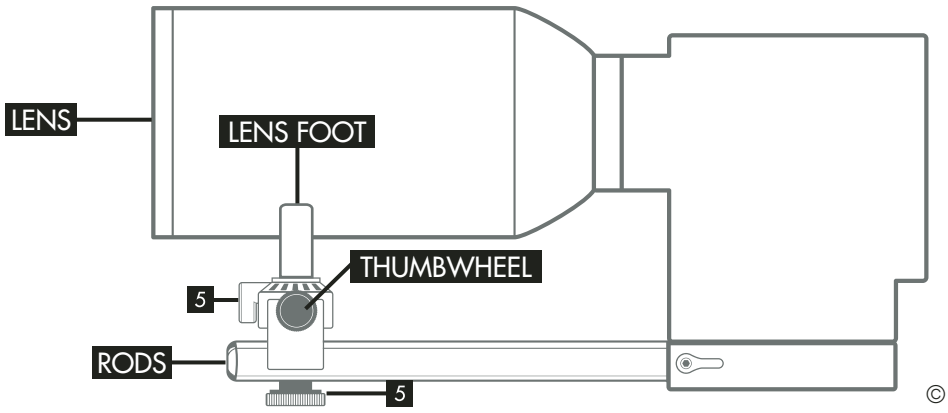

© Wooden Camera, Inc. 2011-2014